

iStart Modes by Version Number

Version 1.1	iStart Pro Automatic Sailboat Race Starter by BalboaRacing.com (949)760-6050									
	Mode	TIME	STYLE	TYPE	ALERT	Mode	TIME	STYLE	TYPE	ALERT
	10	1:00	Dinghy	Once	None	41	3:00	Dinghy	Rolling 3+1	15 sec
	11	1:00	Dinghy	Rolling	None	50	5:00	Rule 26	Once	None
	20	2:00	Dinghy	Once	None	51	5:00	Rule 26	Rolling	None
	21	2:00	Dinghy	Rolling	None	52	5:00	Rule 26	Once	60 sec
	22	2:00	Dinghy	Once	15 sec	53	5:00	Rule 26	Rolling	60 sec
	23	2:00	Dinghy	Rolling	15 sec	70	7:00	Match	Once	None
	24	2:00	Dinghy	Once	60 sec	71	7:00	Match	Rolling	None
	25	2:00	Dinghy	Rolling	60 sec	80	10:00	Match	Once	None
	30	3:00	Dinghy	Once	None	81	10:00	Match	Rolling	None
	31	3:00	Dinghy	Rolling	None	90	10:00	Rule 26	Once	None
	32	3:00	Dinghy	Once	15 sec	91	10:00	Rule 26	Rolling	None
	33	3:00	Dinghy	Rolling	15 sec	92	10:00	Rule 26	Rolling 5+5	None
	34	3:00	Dinghy	Once	60 sec	93	10:00	Rule 26	Rolling 5+5	60 sec
	35	3:00	Dinghy	Rolling	60 sec					
	36	3:00	Rule 26	Once	None					
	37	3:00	Rule 26	Rolling	None					
	38	3:00	Rule 26	Once	60 sec					
	39	3:00	Rule 26	Rolling	60 sec					
	40	3:00	Dinghy	Rolling 3+1	None					
	(1) Hold MODE button for 3 seconds, (2) Select desired mode with MODE button, (3) Wait 3 seconds to SAVE automatically. Version 1.1									

Version 1.2	iStart Pro Automatic Sailboat Race Starter by BalboaRacing.com (949)760-6050									
	Mode	TIME	STYLE	TYPE	ALERT	Mode	TIME	STYLE	TYPE	ALERT
	10	1:00	Dinghy	Once	None	41	3:00	Dinghy	Rolling 3+1	15 sec
	11	1:00	Dinghy	Rolling	None	50	5:00	Rule 26	Once	None
	20	2:00	Dinghy	Once	None	51	5:00	Rule 26	Rolling	None
	21	2:00	Dinghy	Rolling	None	52	5:00	Rule 26	Once	60 sec
	22	2:00	Dinghy	Once	15 sec	53	5:00	Rule 26	Rolling	60 sec
	23	2:00	Dinghy	Rolling	15 sec	54	5:00	Rule 26 RCL	Once	None
	24	2:00	Dinghy	Once	60 sec	55	5:00	Rule 26 RCL	Rolling	None
	25	2:00	Dinghy	Rolling	60 sec	70	7:00	Match	Once	None
	30	3:00	Dinghy	Once	None	71	7:00	Match	Rolling	None
	31	3:00	Dinghy	Rolling	None	80	10:00	Match	Once	None
	32	3:00	Dinghy	Once	15 sec	81	10:00	Match	Rolling	None
	33	3:00	Dinghy	Rolling	15 sec	90	10:00	Rule 26	Once	None
	34	3:00	Dinghy	Once	60 sec	91	10:00	Rule 26	Rolling	None
	35	3:00	Dinghy	Rolling	60 sec	92	10:00	Rule 26	Rolling 5+5	None
	36	3:00	Rule 26	Once	None	93	10:00	Rule 26	Rolling 5+5	60 sec
	37	3:00	Rule 26	Rolling	None					
	38	3:00	Rule 26	Once	60 sec					
	39	3:00	Rule 26	Rolling	60 sec					
	40	3:00	Dinghy	Rolling 3+1	None					
	(1) Hold MODE button for 3 seconds, (2) Select desired mode with MODE button, (3) Wait 3 seconds to SAVE automatically. Version 1.2									

Version 1.3**iStart Pro**

Automatic Sailboat Race Starter by BalboaRacing.com (949)760-6050

Mode	TIME	STYLE	TYPE	ALERT	Mode	TIME	STYLE	TYPE	ALERT
10	1:00	Dinghy	Once	None	41	3:00	Dinghy	Rolling 3+1	15 sec
11	1:00	Dinghy	Rolling	None	42	3:00	ICSA-C	Once	None
20	2:00	Dinghy	Once	None	43	3:00	ICSA-C	Rolling	None
21	2:00	Dinghy	Rolling	None	44	3:00	ICSA-C	Once	15 sec
22	2:00	Dinghy	Once	15 sec	45	3:00	ICSA-C	Rolling	15 sec
23	2:00	Dinghy	Rolling	15 sec	50	5:00	Rule 26	Once	None
24	2:00	Dinghy	Once	60 sec	51	5:00	Rule 26	Rolling	None
25	2:00	Dinghy	Rolling	60 sec	52	5:00	Rule 26	Once	60 sec
30	3:00	Dinghy	Once	None	53	5:00	Rule 26	Rolling	60 sec
31	3:00	Dinghy	Rolling	None	54	5:00	Rule 26 RCL	Once	None
32	3:00	Dinghy	Once	15 sec	55	5:00	Rule 26 RCL	Rolling	None
33	3:00	Dinghy	Rolling	15 sec	70	7:00	Match	Once	None
34	3:00	Dinghy	Once	60 sec	71	7:00	Match	Rolling	None
35	3:00	Dinghy	Rolling	60 sec	80	10:00	Match	Once	None
36	3:00	Rule 26	Once	None	81	10:00	Match	Rolling	None
37	3:00	Rule 26	Rolling	None	90	10:00	Rule 26	Once	None
38	3:00	Rule 26	Once	60 sec	91	10:00	Rule 26	Rolling	None
39	3:00	Rule 26	Rolling	60 sec	92	10:00	Rule 26	Rolling 5+5	None
40	3:00	Dinghy	Rolling 3+1	None	93	10:00	Rule 26	Rolling 5+5	60 sec

(1) Hold MODE button for 3 seconds, (2) Select desired mode with MODE button,
 (3) Wait 3 seconds to SAVE automatically. Version 1.3